


Small hole at the back of the BASIC



Introduce a pin in the hole to open the battery cover

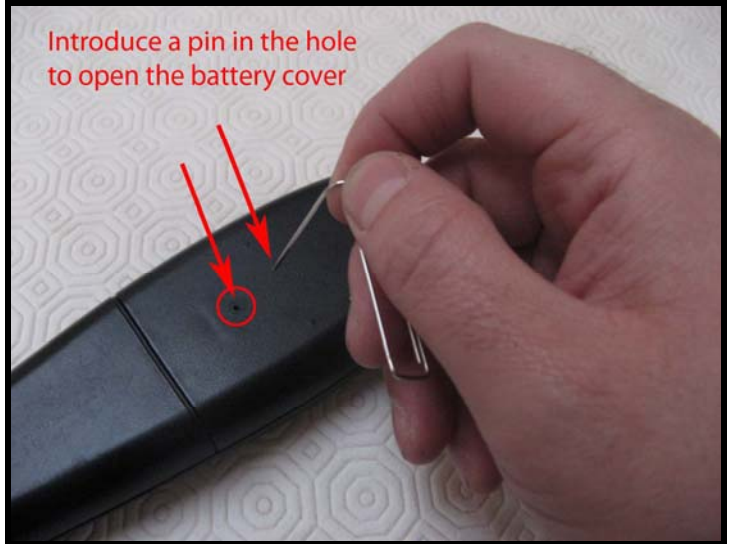

When the pin is introduced in the hole, the battery cover pops out. Remove the cover by sliding it as indicated.



The battery cover removed.



Remove the batteries.



When the batteries are removed, you can see the battery connectors



